



ToolRental

Tile & Grout Cleaner

Operational Guide and Customer Safety



(800) 613-3874




QUICK START

- ① Close pressure release valve.
- ② Remove cap and add tap water.
 - DO NOT ADD CHEMICALS TO WATER.
- ③ Connect Hose.
- ④ Plug In
 - The steam cleaner should be the only appliance plugged into an outlet.
 - Use only a 12 gauge extension cord with maximum length of 25ft.
- ⑤ Press the **POWER AND STEAM** buttons.
 - 10 minutes before your steamer is ready to use.
 - Pressure dial will read greater than 4.
- ⑥ Steam Pressure Control.



Tank Cap

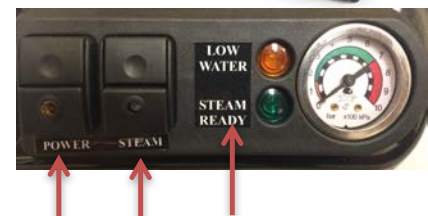

LOW WATER ALERT

During start-up or use, the steamer may run low on water causing the **orange** light to blink and the steamer to beep:

- Add water and restart the by turning OFF and ON the *Power* and *Steam* buttons.
- During use, the *Steam Ready* light will blink indicating the boiler is heating.

CLEANING: Grout

- ① Connect the silver extensions and nozzle to hose handle.
- ② Attach 1"nylon brush to nozzle.
- ③ Steam pressure: Medium
- ④ Apply gentle pressure to the brush during cleaning.
 - Let the steam do the work.
 - Steam will push the dirt out of the grout. Use a towel to wipe.
 - Angle the brush to clean the edges of grout line.

CLEANING: Tile

- ① Attach large floor brush.
- ② Steam pressure: Medium
- ③ Move slowly over tile allowing steam to penetrate the pours in the tile.
- ④ It may be necessary to wrap the brush with a towel for deeper cleaning.

Tile & Brush Kit: US100 Includes:

- 1"nylon brush (2 each) and 1"brass brush.
- Brush kits normally clean 200 Sq. Ft.
 - Additional brush kits may be required depending on the size of the cleaning area and the amount of dirt in the grout.