



ToolRental

Tile & Grout Cleaner

Operational Guide and Customer Safety



(800) 613-3874



QUICK START

- ① **If** your steamer has a pressure release valve, close before starting. **Not all steamers have a release valve.**
- ② Remove cap and add tap water.
 - **DO NOT ADD CHEMICALS TO WATER.**
- ③ Connect hose and cleaning attachment.
 - You will hear a click when connected.
- ③ Plug into electrical outlet.
 - The steamer should be the only appliance plugged into an outlet.
 - *Use only a 12-gauge extension cord with maximum length of 25ft.*
- ⑤ Press the POWER and STEAM buttons.
 - *It will take 10 minutes before your steamer is ready to use.*
 - The steamer is ready when the pressure dial reads greater than 4.
- ⑥ Steam control dial. Increases and decreases the amount of steam released. Use on medium or low setting.



LOW WATER ALERT

During start-up or use, the steamer may run low on water causing the **orange** light to blink and the steamer to beep:

- Add water and restart the by turning OFF and ON the *Power* and *Steam* buttons.
- During use, the *Steam Ready* lens will blink indicating the boiler is heating.

SHUT DOWN PROCEDURE / RENTAL RETURN

- ① Turn OFF *Power* and *Steam* buttons.
- ② If your steamer has a pressure release valve, open the *Pressure Release Valve* by turning counter-clockwise. *Hot Steam will exit from bottom of steamer.*
- ③ If your steamer does NOT have a release valve, turn off and return to store.

WARNING

STEAM GENERATED BY THIS MACHINE IS EXTREMELY HOT AND WILL CAUSE INJURY IF IT COMES IN CONTACT WITH THE SKIN OR EYES.

- Use only as directed in the user manual
- Never place any body part in front of the steam gun.
- Only aim the steam gun at the cleaning area.
- Never unscrew drain plug while steamer is hot.
- *Use only a 12 gauge / 15AMP rated or higher extension cord.*
- Only add tap water to the tank – **NO CHEMICALS.**
- Do not operate or leave unattended around children.
- Always turn OFF when not in use.



ToolRental



Tile & Grout Cleaner

Operational Guide and Customer Safety



(800) 613-3874



PROBLEM	SOLUTION
<p>Push Power Button and steamer does not turn ON (No Lights)</p>	<p>Check electrical panel for tripped breaker:</p> <ul style="list-style-type: none"> ➤ The steam cleaner should be the only appliance plugged into an outlet. ➤ Use only a 12 gauge / 15AMP extension cord with maximum length of 25ft.
<p>No response from the trigger button on the hose handle</p>	<p>Check hose connection:</p> <ul style="list-style-type: none"> ➤ Disconnect and reconnect. ➤ You should hear a “click” when connecting hose to the steamer.
<p>Power but no steam</p> <ol style="list-style-type: none"> ① Check hose connection. ② Is the Release valve closed? (some steamers do NOT have release valves) ③ Is the pressure dial reading less than 3? 	<p>The steamer is vapor locked and the boiler needs to be drained.</p> <p>Vapor lock: Air is trapped in the water pump:</p> <ol style="list-style-type: none"> ① Turn OFF and let the steamer cool for at least 10 minutes. ② Remove drain plug (by hand) located on bottom of the steamer. ③ Drain water and replace drain plug. ④ Close steam release valve. ⑤ Refill reservoir tank and restart. 
<p>Water is draining from the bottom of the steamer</p>	<p>Close the pressure release valve.</p> <p>NOTE: Not all models have a release valve.</p> <ul style="list-style-type: none"> ➤ Pressure release valve is located next to the fill tank. 

CLEANING: Grout

- ① Connect the silver extensions and nozzle to hose handle.
- ② Attach 1”nylon brush to nozzle.
- ③ Steam pressure: Medium
- ④ Apply gentle pressure to the brush during cleaning.
 - Let the steam do the work.
 - Steam will push the dirt out of the grout. Use a towel to wipe.
 - Angle the brush to clean the edges of grout line.

CLEANING: Tile

- ① Attach large floor brush.
- ② Steam pressure: Medium
- ③ Move slowly over tile allowing steam to penetrate the pours in the tile.
- ④ It may be necessary to wrap the brush with a towel for deeper cleaning.

Tile & Brush Kit: US100 Includes:

1”nylon brush (2 each) and 1”brass brush.

- Brush kits normally clean 200 Sq. Ft.
- Additional brush kits may be required depending on the size of the cleaning area and the amount of dirt in the grout.

Each Rental Includes					
Hose	Extension Wands	Water Tank Cap	Spray Nozzle	Floor Brush	Brush Kit
EAG5680	ACC0006	EAG0787	ACC0028	ACC0042	US100
					