



BEFORE YOU LEAVE THE STORE TEST THE STEAMER AND COUNT THE ACCESSORIES

Test

PUSH BOTH BUTTONS TO START

Push both buttons:

- If the GREEN light starts blinking = OK to rent
- If the ORANGE light starts blinking and beeping = OK to rent (add water before starting)

PRESS POWER BUTTON

- ❖ The steamer will cycle on/off when plugged into electric outlet
- 1) Push power button
- 2) If the symbol is flashing = OK to rent
- 3) If the Low Water Alarm flashes = OK to rent

LOW WATER ALARM

All accessories must be included with each rental

- 1) Hose 
- 2) Jett Nozzle 
- 3) Extension Wands (2 each) 
- 4) Floor Brush 
- 5) Brush Kit (5 pack) 

Items NOT included in your rental:

- ✓ Towels for drying
- ✓ Extra brushes (see brush guide)
- ✓ Extension Cord

SCAN QR CODE FOR VIDEO INSTRUCTIONS



USE ONLY 12-GAUGE / 15AMP HEAVY DUTY EXTENSION CORD



WARNING

STEAM GENERATED BY THIS MACHINE IS EXTREMELY HOT AND WILL CAUSE INJURY IF IT COMES IN CONTACT WITH THE SKIN OR EYES.

- Use only as directed in the user manual
- Never place any body part in front of the steam gun.
- Only aim the steam gun at the cleaning area.
- Never unscrew drain plug while steamer is hot.
- Only add tap water to the tank – NO CHEMICALS.
- Do not operate or leave unattended around children.
- Always turn OFF when not in use



Technical Support
(817) 888-8313



Quick Start Guide

1) Remove cap and add tap water



DO NOT ADD CHEMICALS TO THE WATER TANK

2) Plug into electrical outlet

- ✓ The steam cleaner should be the only appliance plugged into an outlet
- ✓ **USE ONLY 12-GAUGE / 15AMP HEAVY DUTY EXTENSION CORD**

3) Push both the POWER and STEAM buttons

- ✓ Green light will start flashing (analog)
- ✓  Symbol will flash (digital)
- ✓ 10 minutes to heat
- ✓ Pressure gauge will read greater than 4 BARS when READY



PUSH BOTH BUTTONS TO START



PRESS POWER BUTTON

4) Attach Steam Hose

- ✓ Listen for a “click” when attached



5) Turn Control Dial to Medium Steam Pressure

- ✓ Turn down the steam pressure to the CLOSED position by turning the knob CLOCKWISE or to the right = no steam is coming from the hose
- ✓ Find Medium Steam Pressure = 1 Full Turn left or COUNTER-CLOCKWISE from the closed position



6) Watch video for cleaning instructions



INSTRUCTIONAL VIDEOS


Trouble Shooting

NO STEAM is released when pulling trigger button on hose handle:

- ✓ Does the pressure gauge read above 4
 - Warm up time is 10 minutes
- ✓ Check the hose connection
 - Try reconnecting the hose
 - Listen for “click” when secure
- ✓ Check the Safety Lock on the hose handle



- ✓ Turn the STEAM PRESSURE DIAL counter-clockwise to release steam

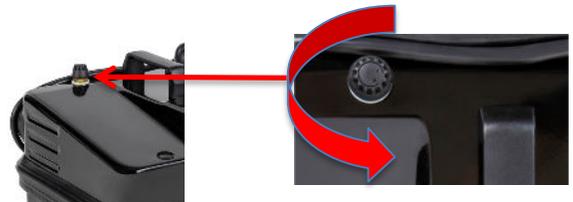

LOW WATER ALERT



During start-up or during use, the steamer may run low on water causing the alarm to sound and the orange light to blink (digital consoles will flash the low water symbol)

- Add water
- Do not turn off the steamer to add water

Technical Support
(817) 888-8313





How Many Brushes will I need?

❖ Each 5 Pack of brushes = 1000 square feet

SCAN QR CODE
FOR VIDEO INSTRUCTIONS

What Type of Brush Do I Need?



Brass or Nylon

- ❖ Brass brushes are normally better and faster for cleaning grout lines
- ❖ We recommend you clean a test area in a place of low visibility before starting any project
- ❖ Use nylon brushes on high gloss and softer floors that may scratch



Customer Return Procedure

- 1) Turn off and Unplug
 - Allow steamer to cool for at least 1 hour before returning to the store
- 2) Clean and place all accessory items inside the cart bucket
- 3) Do not return used or extra brushes

WARNING

STEAM GENERATED BY THIS MACHINE IS EXTREMELY HOT AND WILL CAUSE INJURY IF IT COMES IN CONTACT WITH THE SKIN OR EYES.

- Use only as directed in the user manual
- Never place any body part in front of the steam gun.
- Only aim the steam gun at the cleaning area.
- Never unscrew drain plug while steamer is hot.
- Only add tap water to the tank – **NO CHEMICALS.**
- Do not operate or leave unattended around children.
- Always turn OFF when not in use



Tile & Grout Cleaner Associate Return Checklist



1) Test the Tile & Grout Cleaner

PUSH BOTH BUTTONS TO START

Push both buttons:

- If the GREEN light starts blinking = OK to rent
- If the ORANGE light starts blinking and beeping = OK to rent (customer will need to add water before using)

PRESS POWER BUTTON

- ❖ The steamer will cycle on/off when plugged into electric outlet

- 1) Push power button
- 2) If the symbol is flashing = OK to rent
- 3) If the Low Water Alarm flashes = OK to rent

LOW WATER ALARM

Before Placing Tile & Grout cleaner back into Inventory

2) Check accessories items and reorder any worn or damage items

STEAM HOSE	JETT NOZZLE	EXTENSION WANDS (2 EACH)	FLOOR BRUSH	BRUSH KIT
EAG5680	EAG0028	EAG0006	EAG0042	US100 - NYLON US200- BRASS

3) Drain water from boiler

- 1) Make sure steamer has cooled down before draining water
- 2) Drain plug is located on bottom
- 3) Unplug by hand
- 4) Use drain pan to capture water
- 5) If there is no drain cap, use 13mm wrench

