



Quick Start – Add Water

1) REMOVE VACUUM COLLECTION TANK AND ADD WATER TO THE MINIMUM FILL LINE

- Lift both silver handles to remove lid
- Remove Collection Tank
- ADD WATER TO FILL LINE

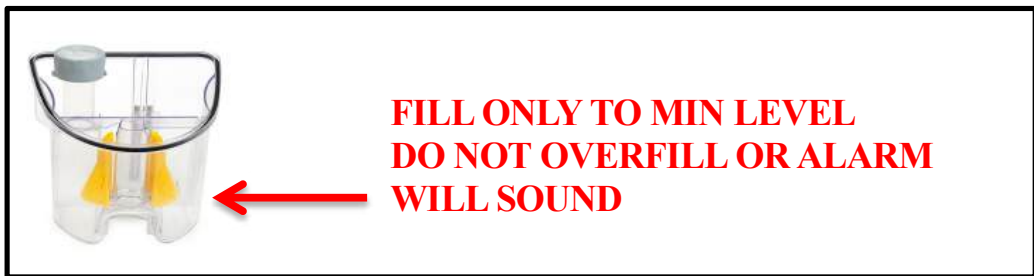

2) FILL RESERVIOR TANK AND EXTRACTION TANK WITH TAP WATER

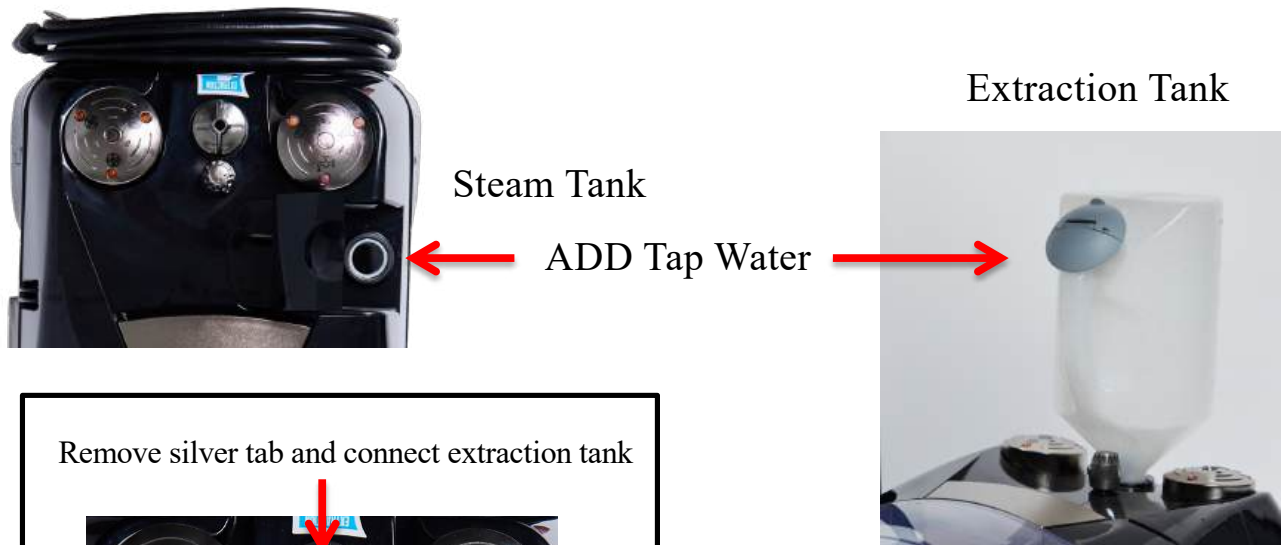

Quick Start – Power

3) CONNECT HOSE

- Lift silver lid and insert hose
- Listen for a “click” when attaching
- Pull on hose to make sure its connected



4) PLUG INTO ELECTRICAL OUTLET AND PUSH MASTER POWER BUTTON ON THE BACK OF THE SEAHAWK

- **The SeaHawk should be the only appliance plugged into the power outlet**
- It will take 6-8 minutes for the SeaHawk to heat and be ready to use



Master Power Switch



USE only a Heavy-Duty Extension Cord

- 10 or 12 Gauge
- 15 AMP / 125V
- 25-50 FT in length


5) PUSH BOTH POWER BUTTONS



The “VACUUM” Button **MUST** have **SOLID** Lights to work

- If lights are flashing, push button again



- One solid light = LOW vacuum
- Two lights = MEDIUM vacuum
- *Vacuum will only operate on Low & Medium when using with steam*
- **MAX Vacuum** can only be used when used steam is OFF
- **PUSH and HOLD**  button on hose handle to increase / decrease vacuum suction

The “STEAM” Button will have one **FLASHING** light while SeaHawk is heating



The light will go solid when ready to use

NOTE: The light will continue to flash during use.

BLINKING RED LIGHT = LOW WATER

- Push the STEAM POWER button to reset the alarm

Quick Start – Steam & Extraction

IT WILL TAKE 6 MINUTES TO HEAT YOUR SEAHAWK

6) SQUEEZE TRIGGER ON HOSE HANDLE TO RELEASE STEAM

NOTE: Hold hose end over sink to purge line until steam starts coming out



To Adjust Steam Pressure: Squeeze Trigger on handle and turn steam dial.

- We recommend turning steam pressure dial ½ way to a MEDIUM steam pressure



INCREASE

DECREASE

Turning the dial all the way to (-) is the lowest possible setting and **NO steam will be released from the hose**

7) ACTIVATE VACUUM BY PRESSING BUTTON ON HOSE HANDLE

NOTE: If Vacuum does NOT turn ON

- Check Hose and make sure it is securely connected
- Check BIG silver vacuum button on Seahawk. It must have 2 SOLID lights



8) ACTIVATE EXTRACTION BY PUSHING THE BUTTON ON HOSE HANDLE

IF ALARM SOUNDS

The alarm will sound if the extraction tank is not pushed down all the way into the SeaHawk. The pump will think it is out of water.

RESET THE ALARM: Turn off and back on the SeaHawk.

Push down and hold the extraction bottle in place while squeezing the steam trigger. This will prime the pump and release the water from the bottle into the SeaHawk.



Troubleshooting

| PROBLEM | SOLUTION |
|--|---|
| Beeping / Blinking Lights | <ol style="list-style-type: none"> 1) The steam tank or the extraction bottle is out of water <ul style="list-style-type: none"> ➤ Refill both tanks 2) The vacuum collection tank is full (above max line) <ul style="list-style-type: none"> ➤ Empty and refill tank to minimum fill line 2) Extraction bottle is NOT attached correctly <ul style="list-style-type: none"> ➤ The fill cap should be facing forward ➤ Remove and replace extraction bottle ➤ Push down on the bottle to set it in place ➤ Push down on the bottle and hold while activating extraction function |
| No power | <ol style="list-style-type: none"> 1) Check master power switch on back of SeaHawk. 2) The SeaHawk should be the ONLY appliance plugged into the electrical outlet: <ul style="list-style-type: none"> ➤ Check the fuse box for tripped circuit breaker <p>If using an extension cord, it must meet the following requirements:</p> <ul style="list-style-type: none"> ➤ Use Minimum 12 gauge / 15AMP / 125V ➤ 25 ft. max length |
| No steam coming out of hose | <ol style="list-style-type: none"> 1) It takes 6-8 minute for the Seahawk to heat and be ready for use 2) Is the steam control adjustment knob turned to the closed position 3) Check the red lock on the hose handle |
| No response from buttons on hose handle | <ul style="list-style-type: none"> ➤ Reconnect the hose ➤ Push BIG silver vacuum button ➤ Check for RED lock on hose handle |
| During the warm-up phase the alarm signals | <p>The boiler has pulled all the water from the reservoir tank</p> <ul style="list-style-type: none"> ➤ Refill Water Tank |
| Low Water Alarm Activates when using extraction function | <p>IF ALARM SOUNDS</p> <p>The alarm will sound if the extraction tank is not pushed down all the way into the SeaHawk. The pump will think it is out of water.</p> <p>RESET THE ALARM: Turn OFF and back ON the SeaHawk.</p> <p>Push down and hold the extraction bottle in place while squeezing the steam trigger. This will prime the pump and release the water from the bottle into the SeaHawk.</p> |